 


Users Manual



**REVERSE TAP
SINGLE FLAT/TALL**

■ Function Description

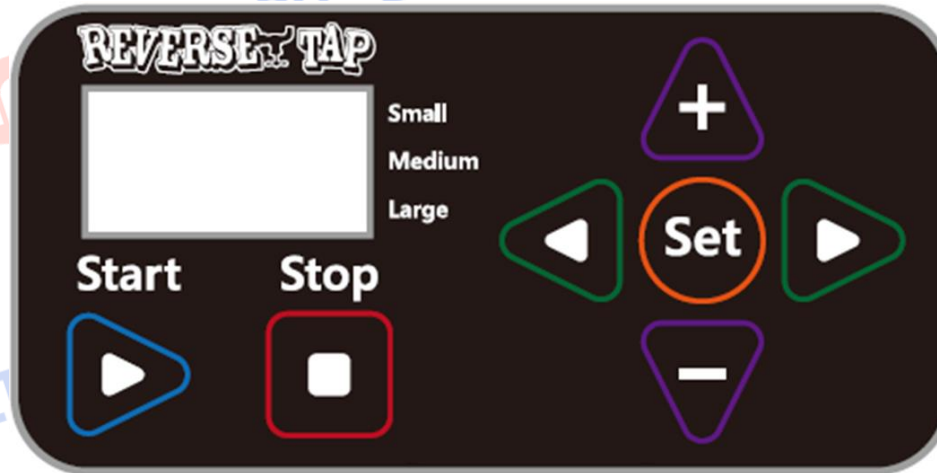

1. Capacity Display

Capacity of the Cup that is currently set is displayed in Large, Medium, Small on OLED.



2. Power OFF

Push the 'Stop' button for at least 2 seconds in Standby mode than power is off with Beep sound and does not have any operations.



3. Power ON

Push the 'Start' button for at least 2 seconds in Power Off mode than power is ON with Beep sound and start the operations.

■ Screen configuration and Switches Function Description



4. Start, Stop Switch

- Press the '**START**' button in manual mode when the state recognized beer cup being discharged by the selected capacity.
- '**STOP**' button is pressed than stop the discharging at any time in manual or automatic mode



 
5. Mode change or Save settings

Change function settings, save the changed setting value



6. Setpoint change switch


Change the set value, the control switch

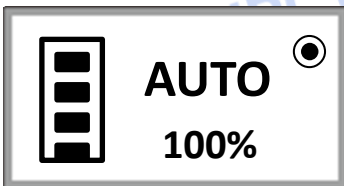

7. OLED Display (1.5Inch)

Operation state, mode selection and a variety of setting display on screen

 ■ Configuring the default display

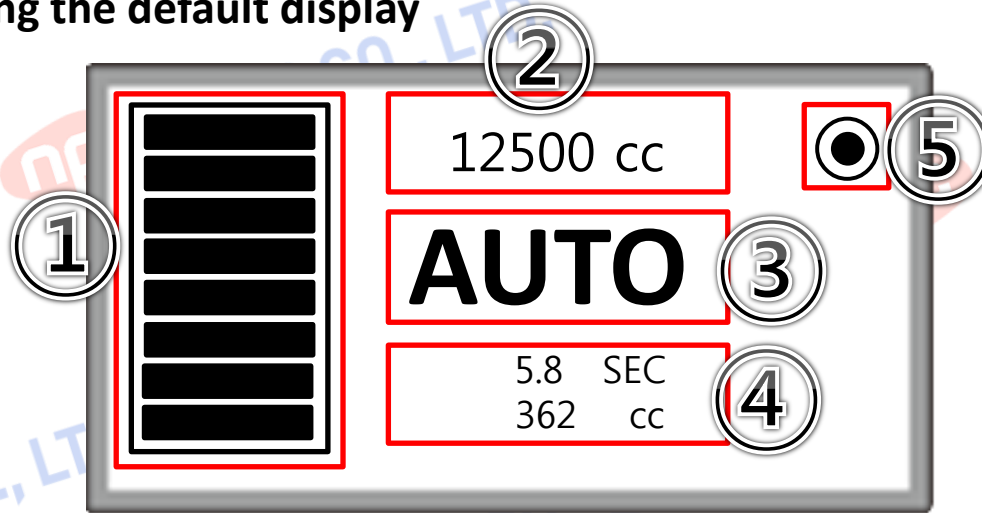

1. Discharge

Usually there is no picture when put a cup box than box displayed, and the interior is filled when the beer began to appear

2. Total sales detail display

Displays the amount of beer consumed to find a beer that is consumed in the Keg, and beer warning less than 10% of the Keg.

 
3. AUTO / MANUAL Display current settings

4. Set time, discharge amount (%)

Normally displays the setting time and display the amount to be discharged when the beer has to be discharged

5. Small, Medium, Large Display current settings

■ Stand by Mode

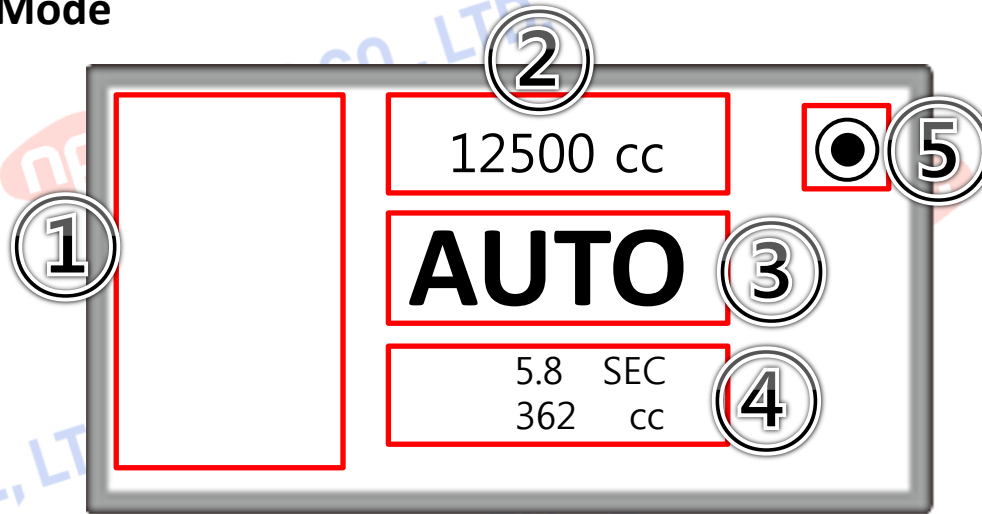


1. Discharge

In the standby mode there is no picture

2. Total sales detail display

Replace with 20,000cc KEG and Blink when consumption should go beyond 18,000 cc

Be sure to press the  button for more than 2 seconds to reset after replace the Keg

3. AUTO / MANUAL Display current settings

 
4. Set time, discharge amount (%)

Current status set SMALL (5.8 seconds), and the discharge rate per second 6.25cc expected


Therefore Total discharge rate is 362cc expected

5. Small, Medium, Large Display current settings

■ Stand by Mode

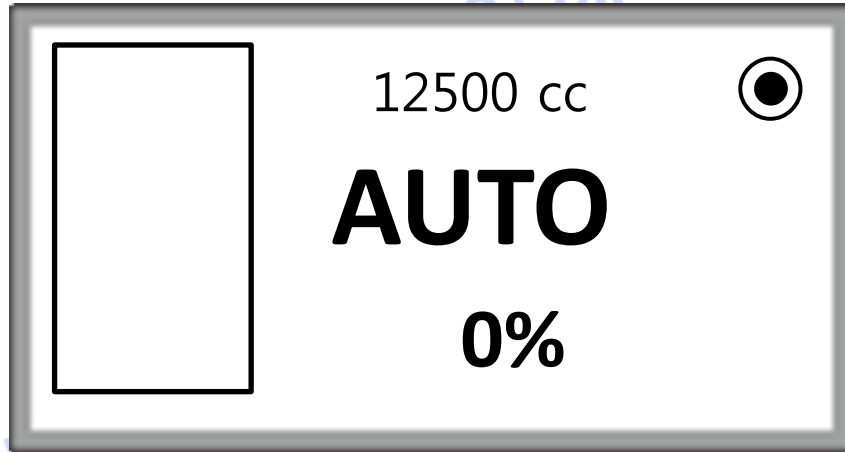

 1. If the cup is recognized box is displayed, and displays the percentage of discharge rate instead of the set value

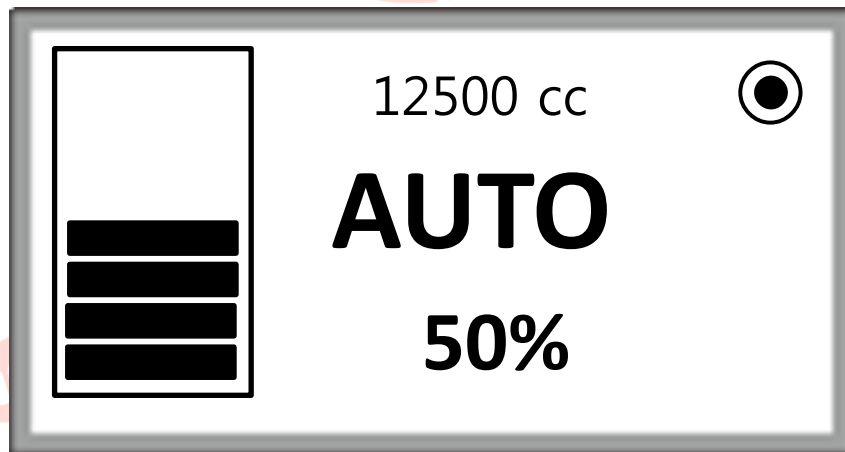

2. When the beer is discharged, bar is increase and beer volume displayed in percent

■ Mode Selection

1. Auto / Manual Mode
2. Size Mode
3. Bubble Mode
4. Sales count Mode
5. LED Lamp Mode
6. Cup Sensor Mode
7. KEG Volume Mode
8. DEMO Mode

When you push the Right button 1 -> 2 -> 3 -> 4 -> 5 -> 6 -> 7 -> 8 -> 1

When you push the Left button 1 -> 8 -> 7 -> 6 -> 5 -> 4 -> 3 -> 2 -> 1

■ Each Mode Display

AUTO

<Auto / Manual Setting>

SMALL
5.8 SEC
362.5 cc

<Size Setting>

BUBBLE
+0 0.0SEC

<Bubble Setting>

T/T 125
DAY 35

<Sales count >

LED Lamp
MODE 1

<LED Setting >

CUP SENS
DOUBLE

<Cup Sensor Setting>

KEG ALARM
0.1 SEC : 6.25CC
ALARM : 18000 CC

<KEG Setting>

DEMO
5.8 SEC
362 CC

<DEMO setting>

■ Stand By Mode



1. In the standby screen, press the **Set** button for 2 seconds or longer to enter the display change mode

The first mode is the AUTO / MANUAL setting mode.

2. For change the setting then press the **Set** button to change the value,

press the **+ -** button will change the contents .

3. After the change, press the **Set** button to complete the change

4. When all the changes are complete, and finally the **Set** button to save the contents to press for more than 2 seconds.

※ If you turn off the system without saving your changes set values will not be saved.

■ Auto , Manual Mode

1. AUTO Mode

If the cup is recognized the beer will be ejected automatically after 0.5 seconds.
When the value set is filled automatically it stops.

2. Manual Mode





This cup is recognized that not discharging beer, just press the 'START' button, the beer is discharged
Regardless of the auto mode / manual mode, when press the 'STOP' button or skipping the cup of
beer will stop discharging



AUTO



 
Manual






1. In the standby screen, press the  button for 2 seconds or longer to enter the display change mode
2. For change the setting then press the  button to change the value,
3. press the  button will change the contents . after the change, press the set button to complete the change
4. When all the changes are complete, and finally the  button to save the contents to press for more than 2 seconds.

※ If you turn off the system without saving your changes set values will not be saved.

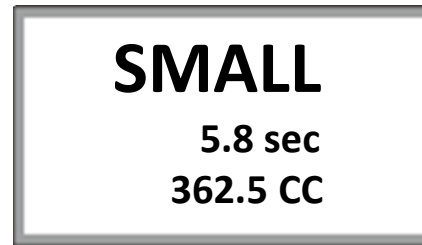■ Size Change Mode

Beer discharge amount is determined by the large , medium , small set but the discharge amount for each setting can be fine-tuned









1. Press the  button to select the **Size mode** displays the current mode on the screen
2. In the standby screen, press the  button for 2 seconds or longer to enter the display change mode
For change the setting then press the  button to change the value,
3. press the  button will change the contents . After the change, press the set button to complete the change
4. When all the changes are complete, and finally the  button to save the contents to press for more than 2 seconds.

※ If you turn off the system without saving your changes set values will not be saved.

■ Bubble Mode

Bubble Mode serves to generate bubbles of beer



1. Press the  button to select the **Bubble mode** displays the current mode on the screen
2. In the standby screen, press the  button for 2 seconds or longer to enter the display change mode
3. Change the value +1 <-> +2 <-> +3 <-> 0 <-> -1 <-> -2 <-> -3 sequence.
+1 means the bubble before the beer is discharged once, the meaning of -3 occurs beer bubbles after being discharged three times
4. Press the  button and the right number blink, press the  button to change the time per 0.1 seconds from 0.1 to 0.9 seconds . After the change press the  button to complete the change
5. When all the changes are complete, and finally the  button to save the contents to press for more than 2 seconds.

 
※ If you turn off the system then not change set values.

■ Bubble Mode

If the value is (+) a has been working on the front, (-) has been working in the back value is 0 then not action.

Bubble
+1 0.1 sec

 
Example. Setting Value -> -2 0.5 sec

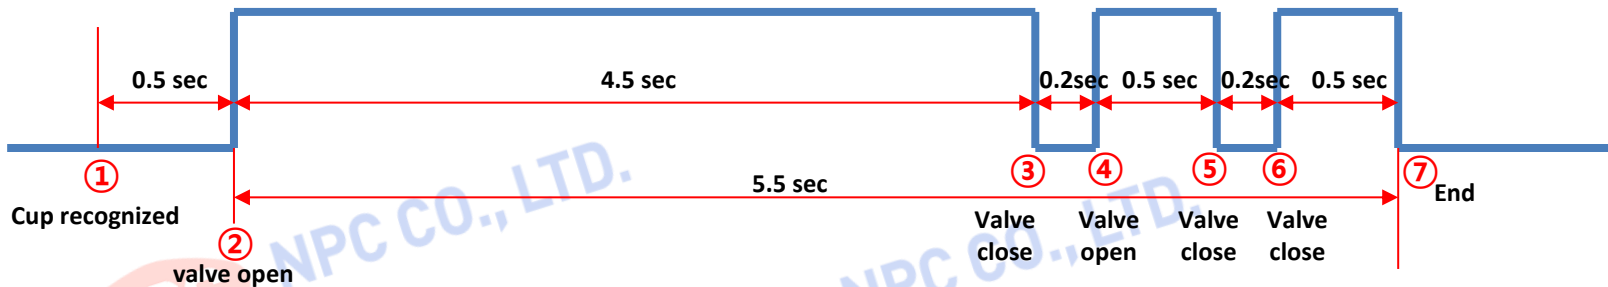





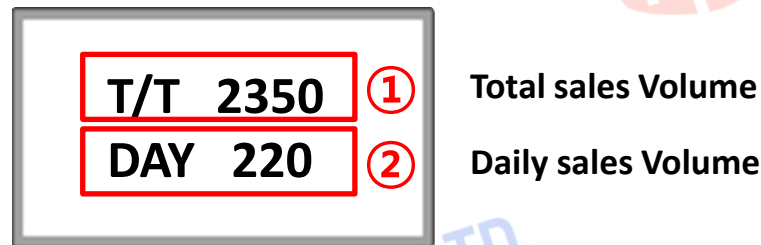

Total beer release time : 5.5 sec

■ Sales Count Mode





Displays the total sales volume and daily sales volume



1. Press the   button to select the **sales Count mode** displays the current mode on the screen
2. In the standby screen, press the  button for 2 seconds or longer to enter the display change mode
3. Total sales volume and today sales volume will increase when sell the glass of beer
4. Press the  button then Blink the T/T 2350 text , press the  button for 2 seconds or longer then reset to default value.
5. When the Total sales volume is clear then Today sales volume clear also. But only clear ther today sales volume then Total sales volume is not changed. If you turning off the power value does not change or clear until you manually cleared
6. When all the changes are complete, and finally the  button to save the contents to press for more than 2 seconds.

■ LED Lamp Mode

LED Lamp Mode 1

1. Press the  button to select the **LED Lamp Mode** displays the current mode on the screen
2. In the standby screen, press the  button to enter the display change mode
4. press the  button will change the contents . After the change, press the set button to complete the change
5. When all the changes are complete, and finally the  button to save the contents





※ If you turn off the system then not change set values.

Mode 0 : Various Color	Mode 6 : Yellow Color LED
Mode 1 : Red Color LED	Mode 7 : Purple Color LED
Mode 2 : Green Color LED	Mode 8 : Light Green Color LED
Mode 3 : Blue LED	Mode 9 : Light blue Color LED
Mode 4 : White LED	Mode 10 : Light purple Color LED
Mode 5 : Blink LED	Mode 11 : Light yellow LED

■ CUP Sensor Mode

LED lamp blinks Change the way. This feature works only when the beer discharged

**CUP SENSE
DOUBLE**

1. Press the  button to select the **LED Lamp Mode** displays the current mode on the screen
2. In the standby screen, press the  button to enter the display change mode
3. press the  button will change the contents . After the change, press the set button to complete the change
4. When all the changes are complete, and finally the  button to save the contents

※ If you turn off the system then not change set values.

DOUBLE Mode

- When set to 'DOUBLE' Both of the sensors must be recognized beer is discharged










SINGLE Mode

- When set to 'SINGLE' even recognize only one of the two sensors are beer discharged

 
■ KEG ALARM Mode




You can change the discharge volume settings and set KEG capacity



1. Press the   button to select the **KEG ALARM** displays the current mode on the screen
2. In the standby screen, press the  button to enter the display change mode
3. press the   button will change the contents . After the change, press the set button to complete the change
4. [Change the Discharge rate] can change the amount of discharged of **0.1** seconds,
Press the   buttons to be changed to **0.05cc** unit
5. [ALARM] will be changed to **100cc** unit. This setting is to change the warning capacity in the Standby screen.
6. Changing a discharge rate is not changing the actual discharge volume.
It is only the reference value of the discharge amount by the measure
7. press the  button for 2 seconds or longer then reset to default value.
8. When all the changes are complete, and finally the  button to save the contents to press for more than 2 seconds.

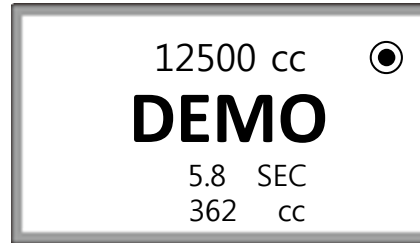■ DEMO Mode



1. Press the  button to select the **LED Lamp Mode** displays the current mode on the screen
2. Press the 'START'  button to start the DEMO works with BEEP sound.
3. Press the 'STOP'  button to stop.
4. When the demonstration mode is started only by operating the START " STOP 'button, regardless of the cup sensor

When Demo mode have to not connected to beer machine, because it is operation regardless of the cup sensor. also Please be careful about risk of overheating during long operations, such as brush valves

■ Default Setting Value

Default setting value are as below

Parameter	Default Setting	Min	Max	Remark
Small Cup On Time	5.8	0	99	sec
Medium Cup On Time	7.5	0	99	sec
Large Cup On Time	11.3	0	99	sec
Bubble Count	0	-3	+3	
Bubble Generation Time	0	0	0.9	sec
Total Cups	0	0	50000	Total sales amount / EA
Daily Cup	0	0	5000	Daily sales amount / EA
Flow Count	0	0	1000000	impeller sign count
LED Mode	0	0	11	LED Mode
OLED Contrast Value	5	0	255	OLED brightness , 0~7 step
Cup Sense Mode	1	0	1	Cup sensor method
Capacity Unit	6.25	0	100	Discharged rate, / cc
Alarm Capacity	18000	0	50000	Alarm value / cc

■ Factory default initialization

In the normal standby screen press the   buttons and hold for 2 seconds or more at the same time are reset to the Default Setting value as everything is reset